iilus

Installation Manual

Accent

100 10 0011 --.---

Power	8W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 92mm Depth
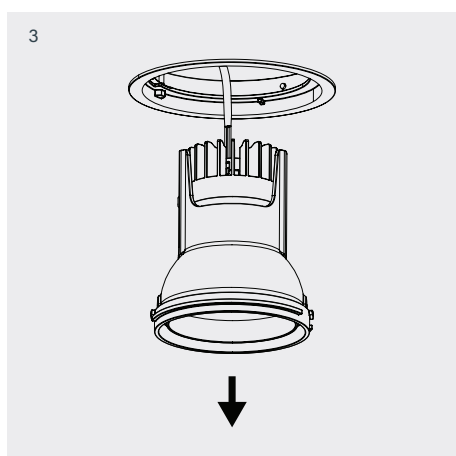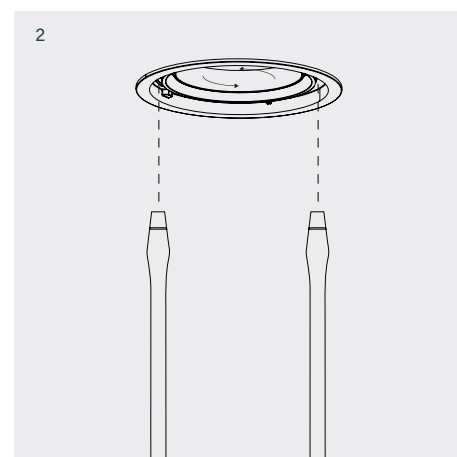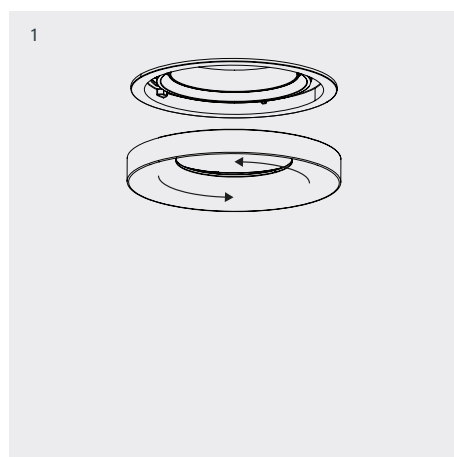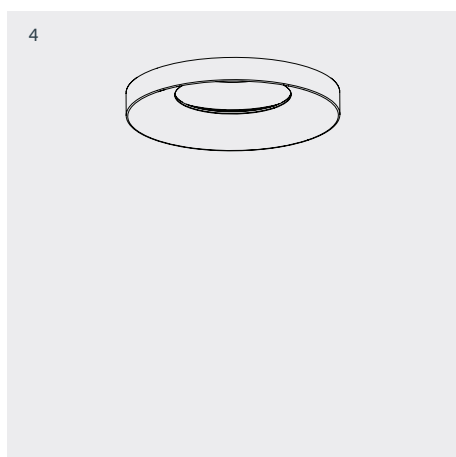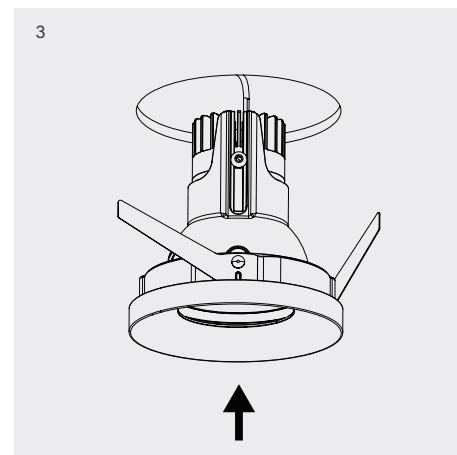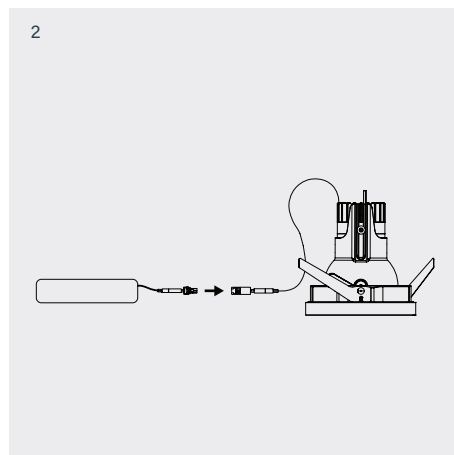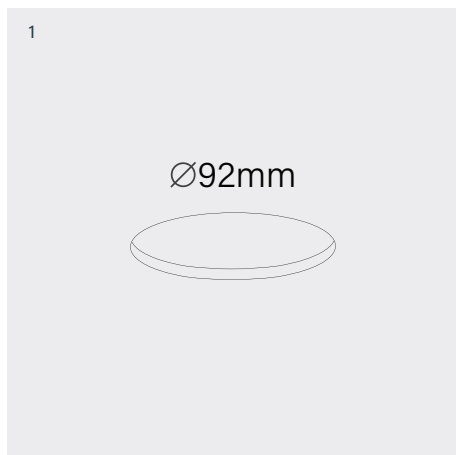
1

Ø92mm

2

3

4

1

2

3

Installation

1   Cut 92mm diameter round aperture.

2   Plug driver into luminaire.

3-4   Fold back retention blades and insert luminaire into the aperture.

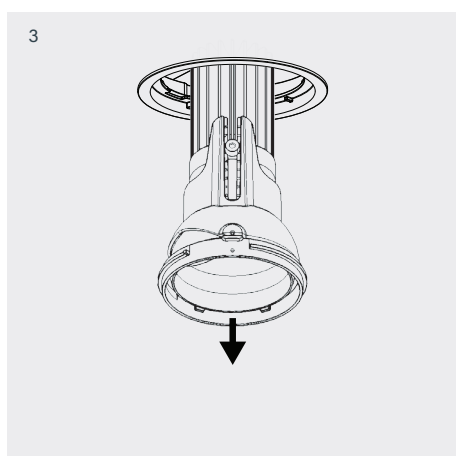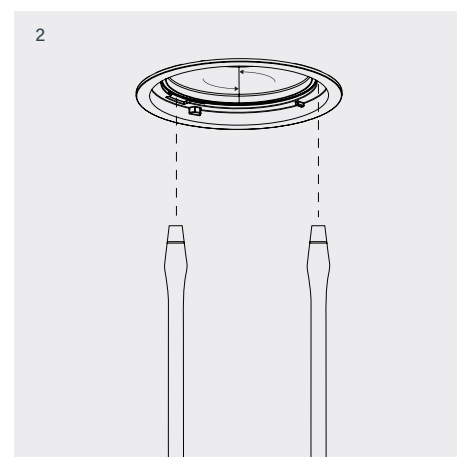### Maintenance

1   To access internal housing, remove facade by unscrewing anti-clockwise.

2   To remove the module housing, push back metal tabs using flathead screwdriver.

3   Twist the module housing, allowing it to drop out through tab slots.

AUSTRALIAN MADE

iilus

Installation Manual

Accent 100 Recessed Directional Type 1

100 10 0011 --.---

Power	14W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 160mm Depth

1

Ø92mm

2

3

4

1

2

3

Installation

1   Cut 92mm diameter round aperture.

2   Plug driver into luminaire.

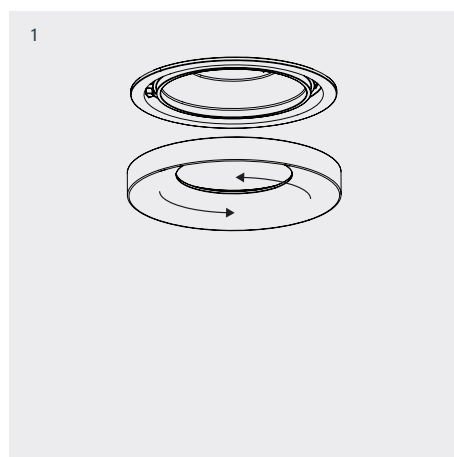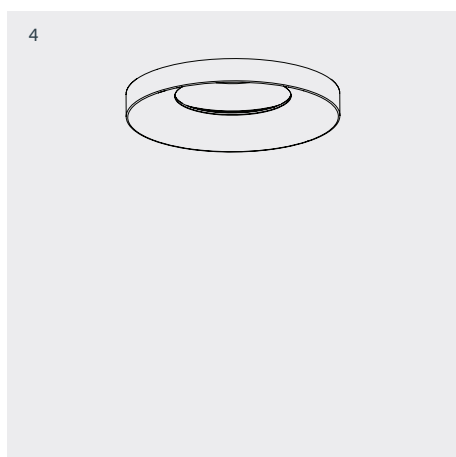3-4   Fold back retention blades and insert luminaire into the aperture.

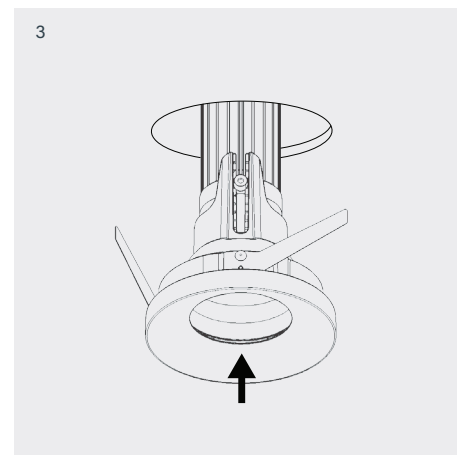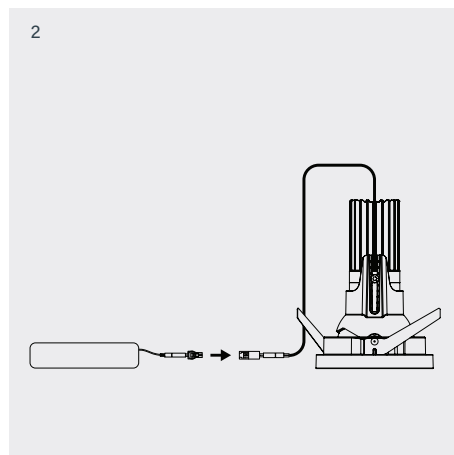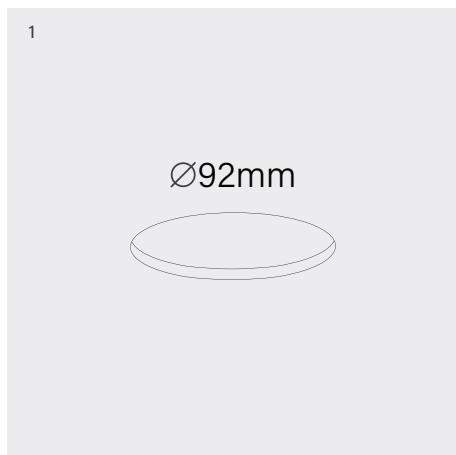Maintenance

1   To access internal housing, remove facade by unscrewing anti-clockwise.

2   To remove the module housing, push back metal tabs using flathead screwdriver.

3   Twist the module housing, allowing it to drop out through tab slots.

AUSTRALIAN MADE

iilus

Installation Manual

Accent 100 Recessed Directional Type 2

100 10 0012 --.---

Power	8W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 92mm Depth

1

Ø92mm

2

3

4

1

2

3

Installation

1   Cut 92mm diameter round aperture.

2   Plug driver into luminaire.

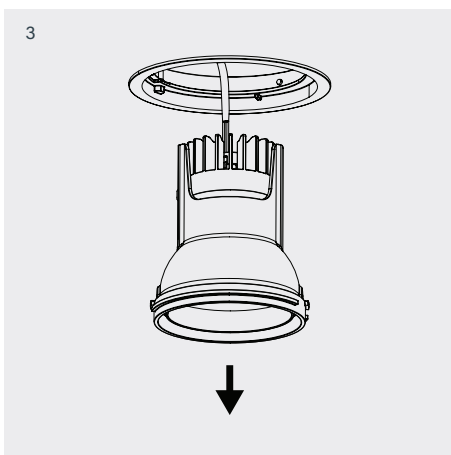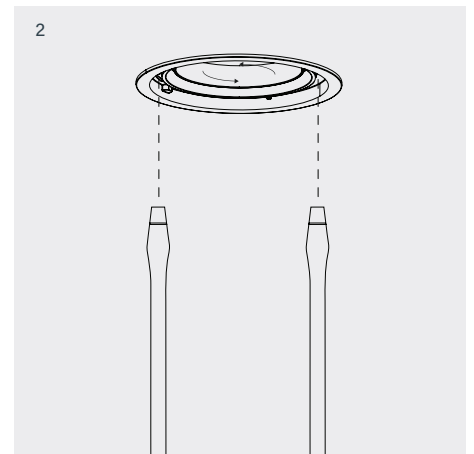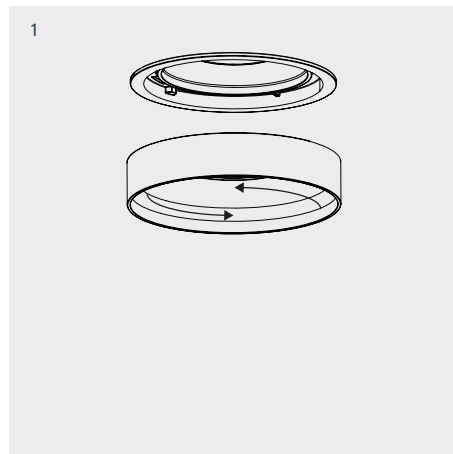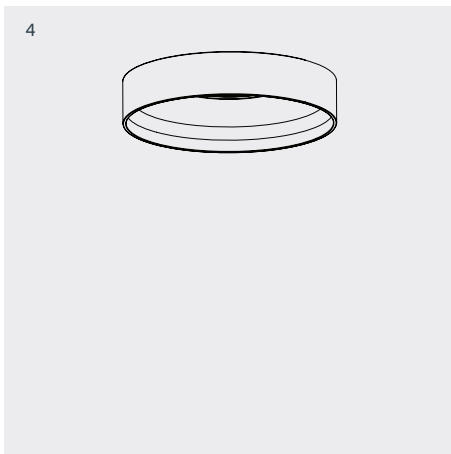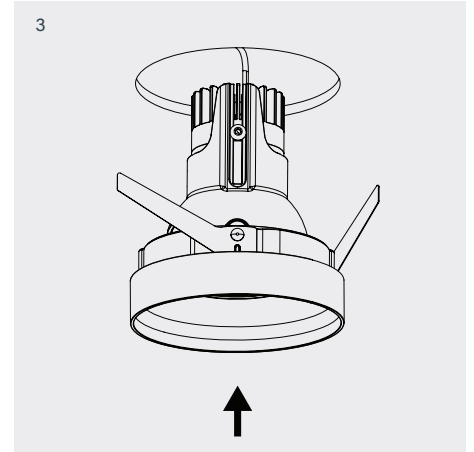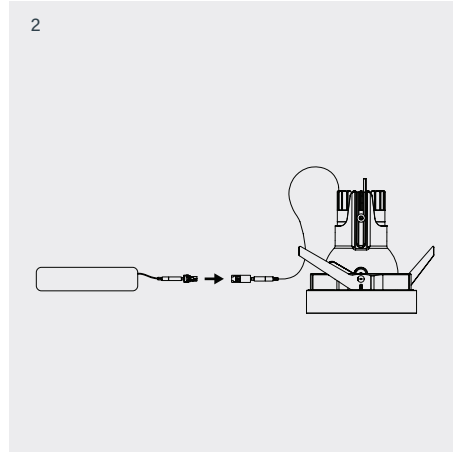3-4   Fold back retention blades and insert luminaire into the aperture.

Maintenance

1   To access internal housing, remove facade by unscrewing anti-clockwise.

2   To remove the module housing, push back metal tabs using flathead screwdriver.

3   Twist the module housing, allowing it to drop out through tab slots.

AUSTRALIAN MADE

iilus

Installation Manual

Accent 100 Recessed Directional Type 2

100 10 0012 --.---

Power	14W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 150mm Depth

Installation

1   Cut 92mm diameter round aperture.

2   Plug driver into luminaire.

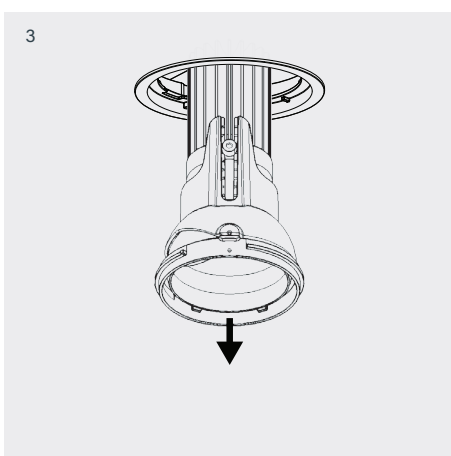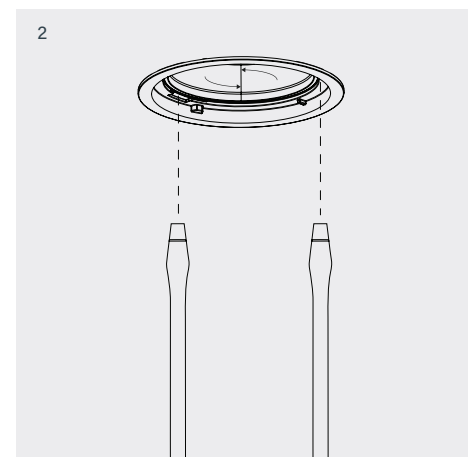3-4   Fold back retention blades and insert luminaire into the aperture.
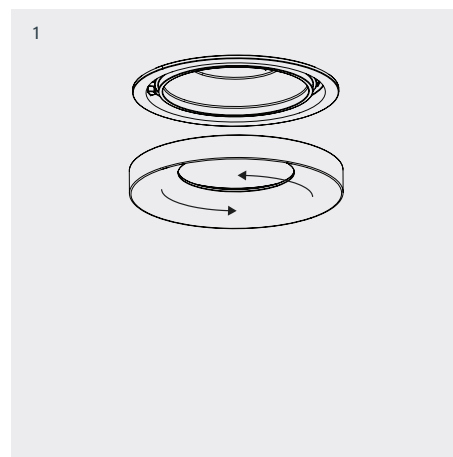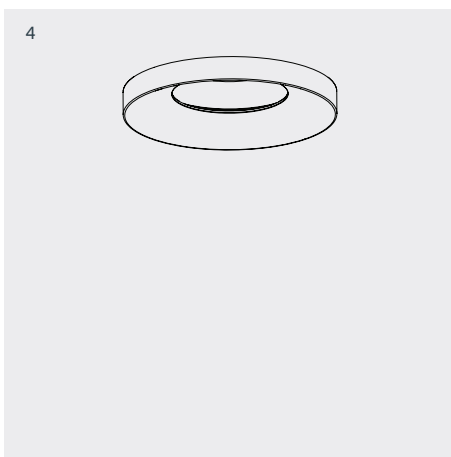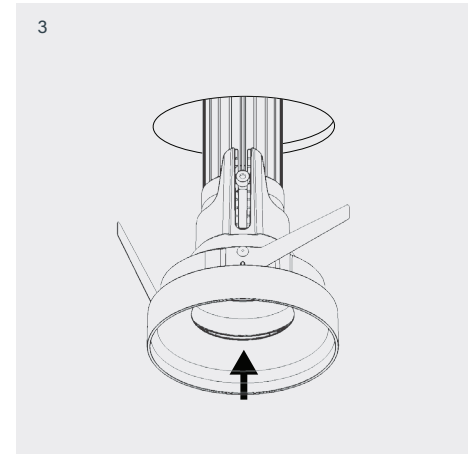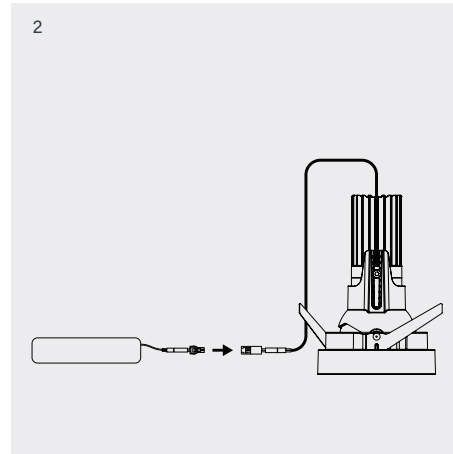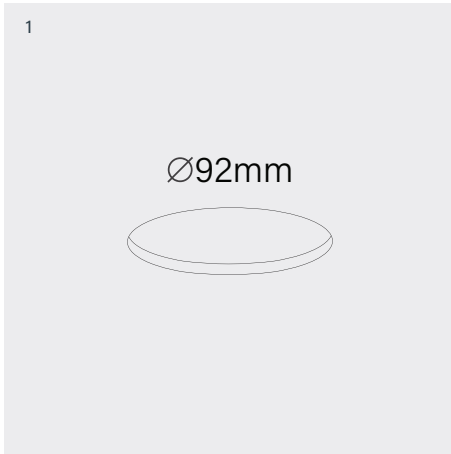
Maintenance

1   To access internal housing, remove facade by unscrewing anti-clockwise.

2   To remove the module housing, push back metal tabs using flathead screwdriver.

3   Twist the module housing, allowing it to drop out through tab slots.

iilus

Installation Manual

Accent 100 Recessed Directional Type 3

100 10 0013 --.---

Power	8W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 92mm Depth

1

∅92mm

2

3

4

1

2

3

Installation

1   Cut 92mm diameter round aperture.

2   Plug driver into luminaire.

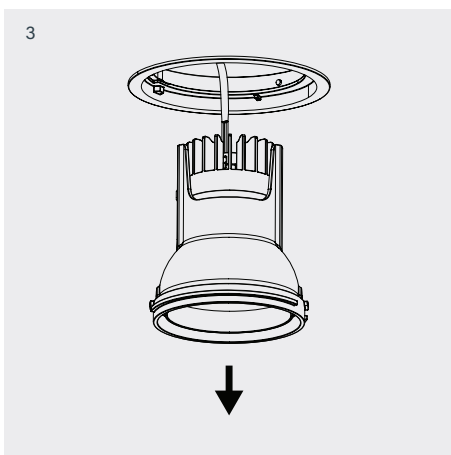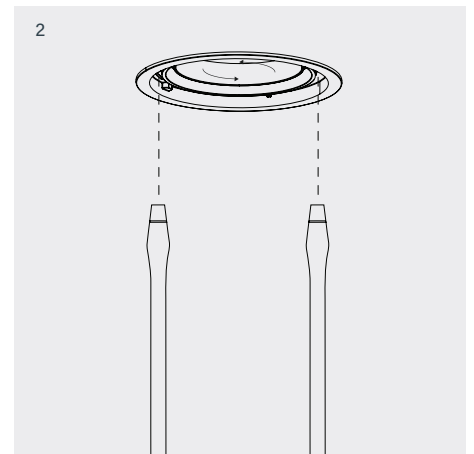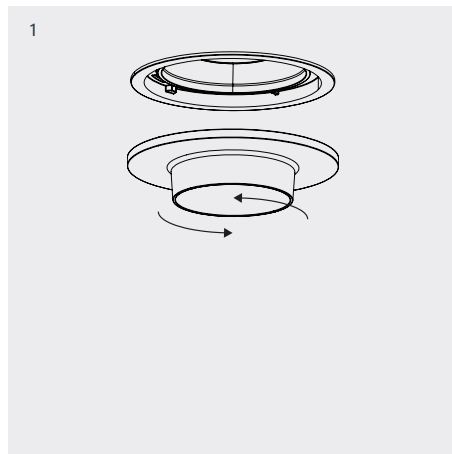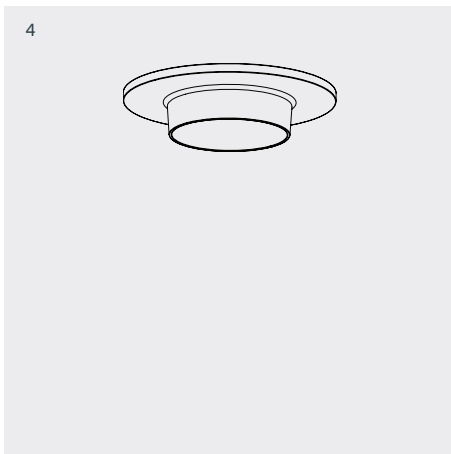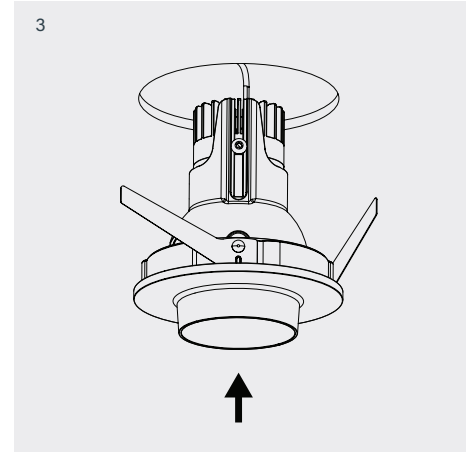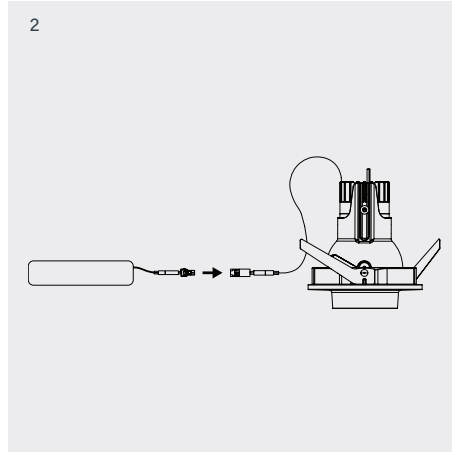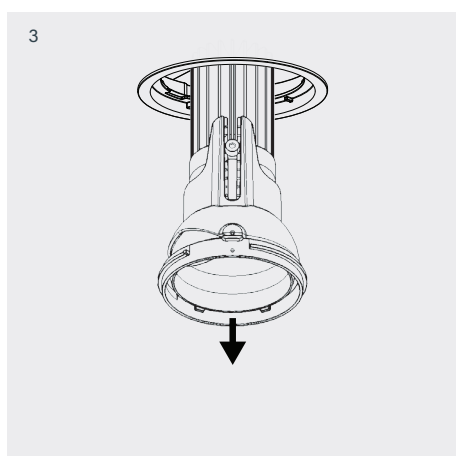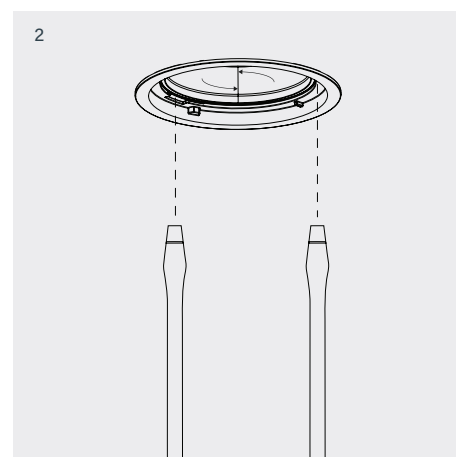3-4   Fold back retention blades and insert luminaire into the aperture.

Maintenance

1   To access internal housing, remove facade by unscrewing anti-clockwise.

2   To remove the module housing, push back metal tabs using flathead screwdriver.

3   Twist the module housing, allowing it to drop out through tab slots.

AUSTRALIAN MADE

iilus

Installation Manual

Accent 100 Recessed Directional Type 3

100 10 0013 --.---

Power	14W
Voltage	240V-AC
Class	III
Ingress Protection	IP20
Cut-Out	Ø92 x 150mm Depth

1

Ø92mm

2

3

4

1

2

3

Installation

1 Cut 92mm diameter round aperture.

2 Plug driver into luminaire.

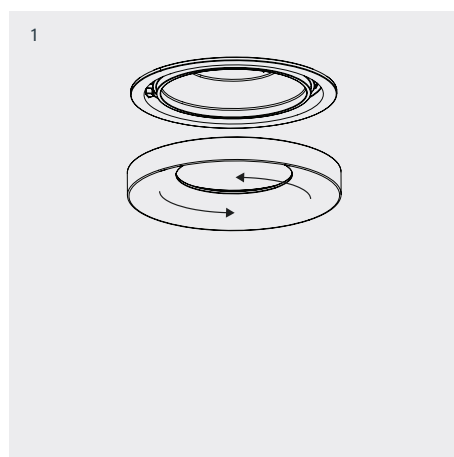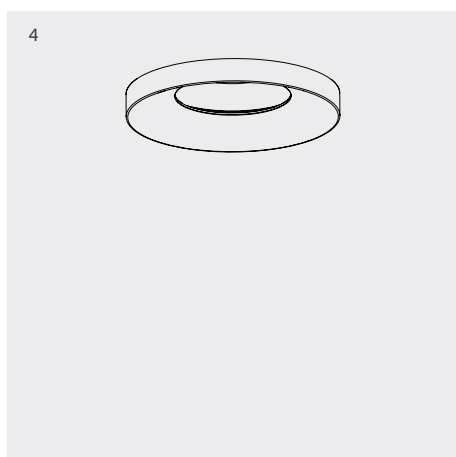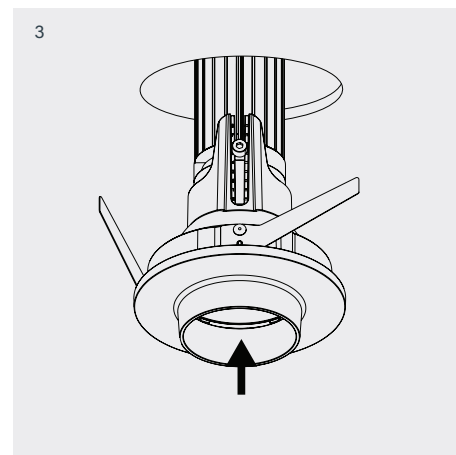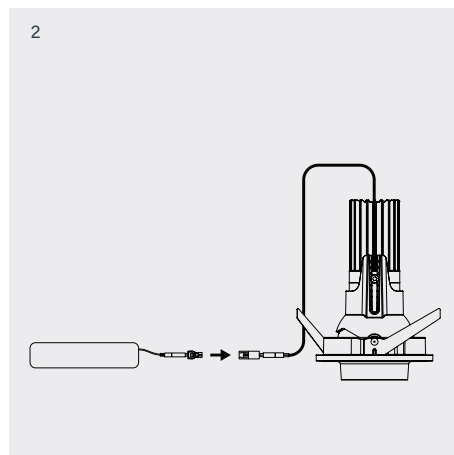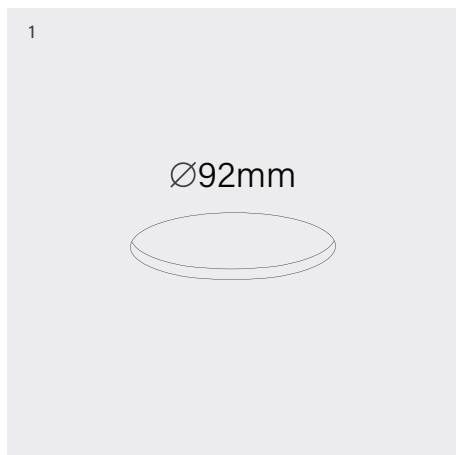3-4 Fold back retention blades and insert luminaire into the aperture.

Maintenance

1 To access internal housing, remove facade by unscrewing anti-clockwise.

2 To remove the module housing, push back metal tabs using flathead screwdriver.

3 Twist the module housing, allowing it to drop out through tab slots.

AUSTRALIAN MADE